CUSTOMER SUPPORT

Pliant Technologies offers technical support via phone and email from 07:00 to 19:00 Central Time (UTC−06:00), Monday through Friday.

1.844.475.4268 or +1.334.321.1160
customer.support@plianttechnologies.com

You may also visit our website (www.plianttechnologies.com) for live chat help. (Live chat available 08:00 to 17:00 Central Time (UTC−06:00), Monday through Friday.)

Additional Documentation

This is a quick start guide. For additional documentation on MicroCom XR, visit our website. (Scan this QR code with your mobile device to navigate there quickly.)

IN THIS BOX

WHAT'S INCLUDED WITH THE 4-WIRE I/O HEADSET ADAPTER?

- PAC-MC4W-IO: Pliant 4-Wire In/Out Headset Adapter
- CAB-4W-WI: 3.5 mm TRS to RJ45 cable
- 3.5 mm to 3.5 mm Audio Cable
- USB-C Charging Cable
- Quick Start Guide

ACCESSORIES

OPTIONAL ACCESSORIES

- Selection of compatible dual-mini (DMG) headsets (see Pliant website for more details)

COPYRIGHT © 2021-2023 Pliant Technologies, LLC. All rights reserved. The Pliant™ word mark and the Pliant "P" logo are registered trademarks of Pliant Technologies, LLC. Any and all other trademark references within this document are property of their respective owners.

Document Reference: D0000627_B

QUICK START GUIDE

PLIANT TECHNOLOGIES


4-WIRE I/O HEADSET ADAPTER
GEN 1



Only compatible with the MicroCom XR BeltPack.
For more information visit
www.plianttechnologies.com

OPERATION

4-Wire In/Out Headset Adapter

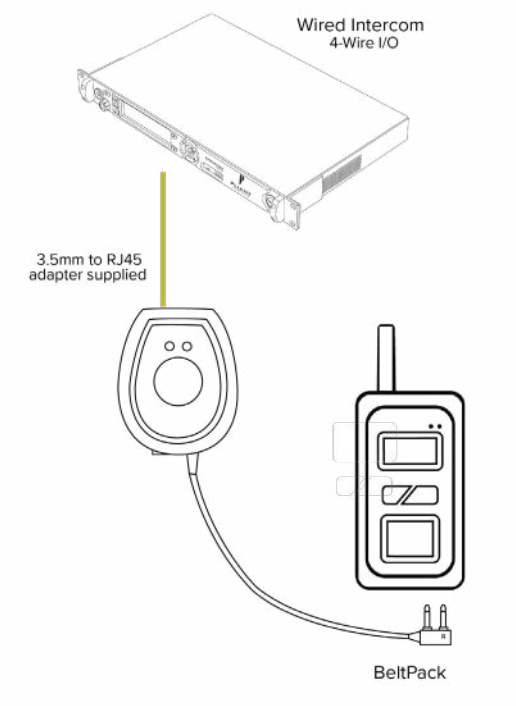


LED Indicators

Power LED turns Blue	Power ON
Power LED OFF	Power OFF
Power LED turns Red	Charging
Power LED OFF	Fully Charged
PTT LED turns Red	PTT Engaged

Connect to a Wired Intercom


1. Verify all of the equipment is powered off.
2. Connect the 3.5 mm end of either the CAB-4W-WI or the 3.5 mm to 3.5 mm audio cable to the wired intercom connection on the headset adapter.
3. Connect the other end into a wired intercom system's 4-Wire In/Out connection.
4. Connect a beltpack using the cable attached to the headset adatper.

   Note: Correct orientation as shown to the right.

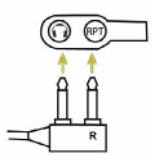

5. Set the In/Out volume/gain levels of the wired intercom in the center position.
6. Power on all attached equipment.
7. Adjust the beltpack volume and wired intercom volume/ gain levels as needed.

CAB-4W-WI CABLE

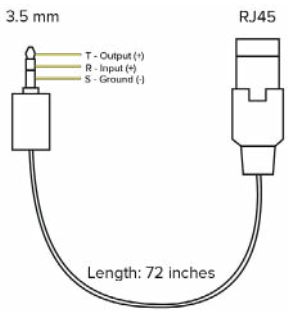

Pin Out Connections	
3.5 mm	**RJ45**
-	1
-	2
T	3
R	4
S	5
	6
-	7
-	8